














UK Bandwidth Setup Guide

To comply with UK Interface Requirements, EasyLink devices must be correctly calibrated for outdoor use.

By default the device is set to Band A (5150-5350 MHz) for indoor use only. To change the device frequency to **Band B (5470-5730 MHz) for outdoor use**, adjust dip switches 2-8 to one of the Band B combinations below:

ON	DIP	IP (GB)	IP (MB)	MHz
Band A: INDOOR USE ONLY				
		172.18.8.X	172.10.0.X	5180
Band B: OUTDOOR USE				
[5]		172.18.8.X	172.19.8.X	5500
[5][8]		172.18.9.X	172.19.9.X	5520
[5][7]		172.18.10.X	172.19.10.X	5540
[5][7] [8]		172.18.11.X	172.19.11.X	5560
[5][6]		172.18.12.X	172.19.12.X	5580
[5][6] [8]		172.18.13.X	172.19.13.X	5600
[5][6] [7]		172.18.14.X	172.19.14.X	5620
[5][6] [7][8]		172.18.15.X	172.19.15.X	5640
[4]		172.18.16.X	172.19.16.X	5660
[4][8]		172.18.17.X	172.19.17.X	5680
[4][7]		172.18.18.X	172.19.18.X	5700
[4][7] [8]		172.18.19.X	172.19.19.X	5720

For more configuration details please refer to the DIP MANUAL or scan QR Code to read the Ofcom guidelines.

