

 **FABER**

FLANGE 3


Installation Instructions
Use and Care Information

Instructions d'installation
Utilisez et d'entretien


Instrucciones de instalación
Información de uso y cuidado

FLANGE 3


LINER DIMENSIONS

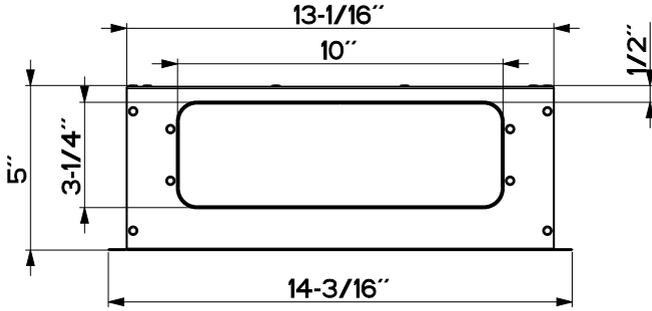

Front View

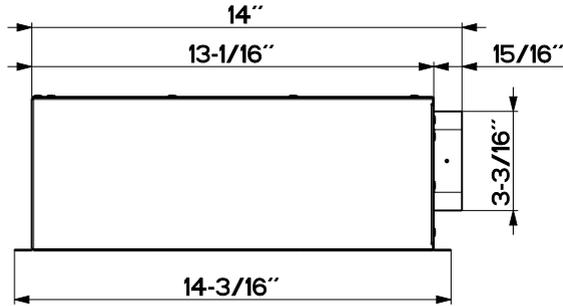

Side View

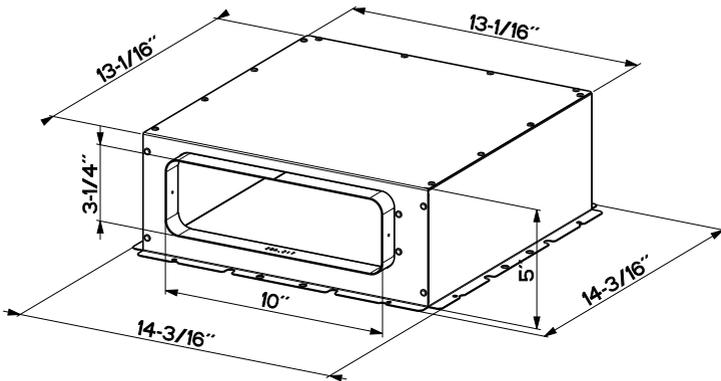

Overall Dimensions

PARTS

PARTS INCLUDED

REF	PART		
A	Torx Screws (1/8" x 5/16")	 	4
B	Torx Screws (3/16" x 5/16")	 	4

PARTS NEEDED


PART	
3 1/4" x 10" Rectangular Ductwork	

TOOLS NEEDED


TOOL	
Tape Measure	
Pencil	
Torx Screwdriver	
Metal sheers	
Work gloves	
Foil Tape	

INSTALL THE FLANGE 3 TO THE CEILING RANGE HOOD

- 1 Unscrew the 4 original screws from the motor box and detach from the hood.

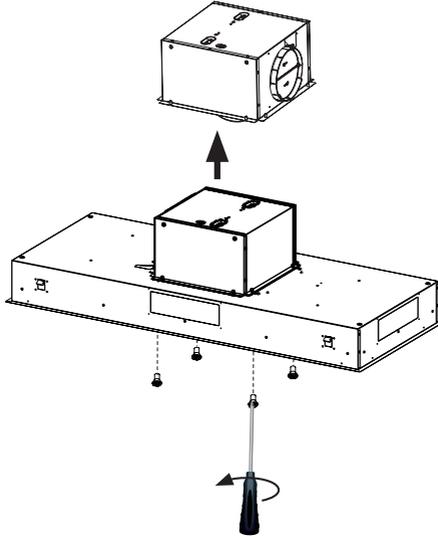


- 2 Attach the Flange 3 to the hood in the same location as the original motor box with the screws **A** provided in the hardware bag as shown

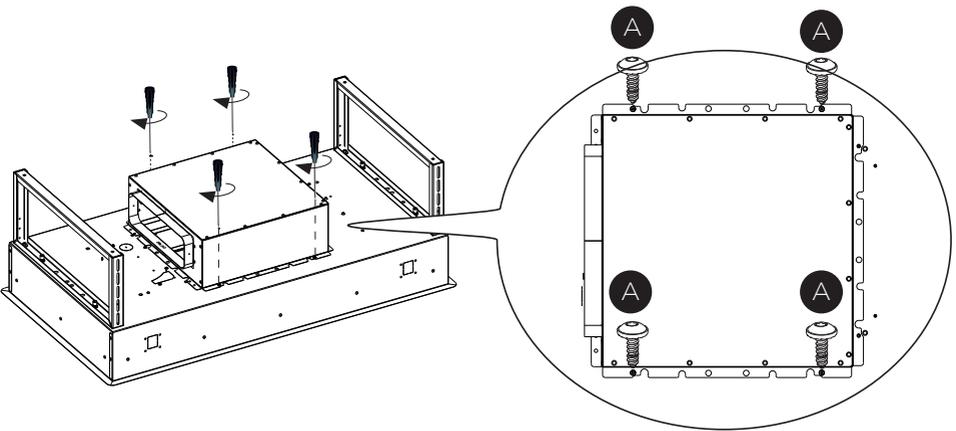

- 3 Seal with foil tape
- 4 Consult your Hoods Installation Manual and the Remote Blower or In-Line Blower Manual to continue with installation.

INSTALL THE FLANGE 3 TO THE DOWNDRAFT RANGE HOOD


- 1 Remove the blocker plate from the hood.

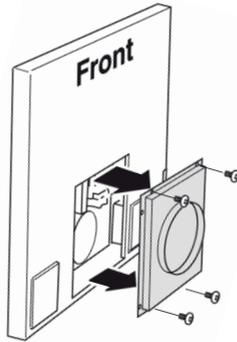


- 2 Attach the Flange 3 to the hood in the same location as the blocker plate using the screws **A** and **B** provided in the hardware bag.

FOR SCIROCCO PLUS MODELS:

Venting down

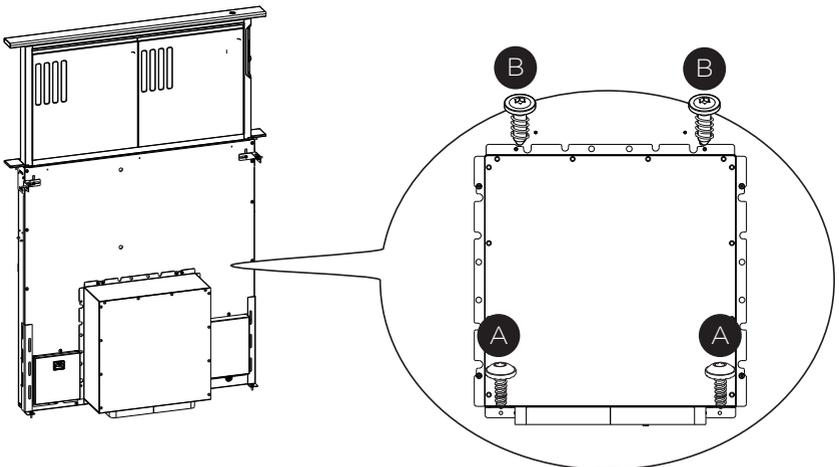


Venting to the side

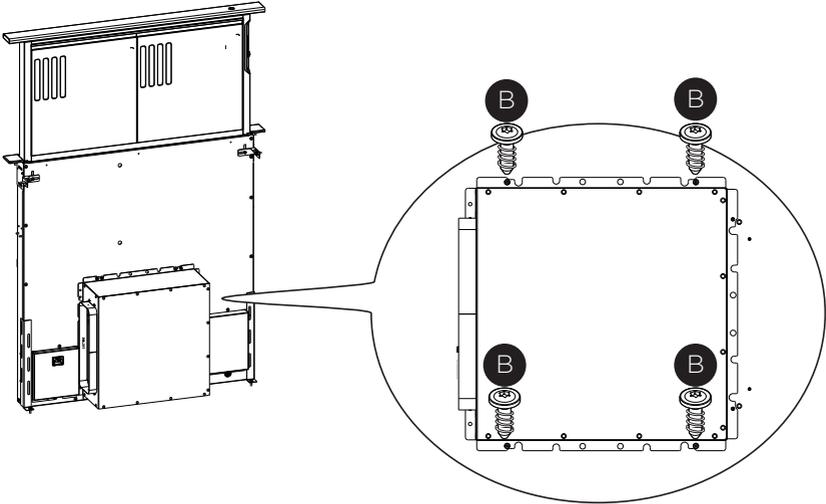


FOR SCIROCCO LUX MODELS:

Venting down

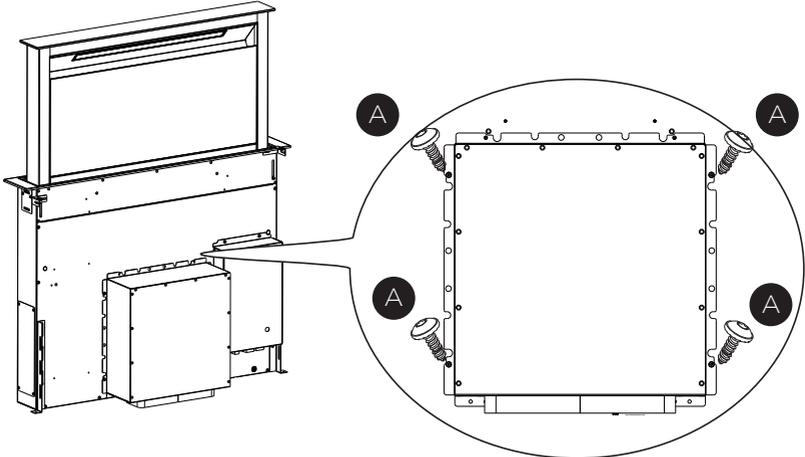

Venting to the side

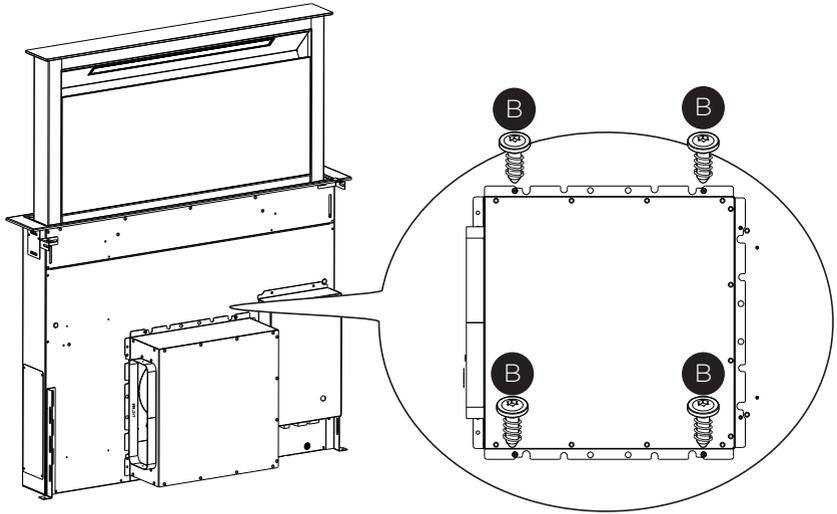

3 Seal with foil tape

4 Consult your Hoods Installation Manual and the Remote Blower or In-Line Blower Manual to continue with installation.

